



1. Put 2pcs Pipe through column, Screwing into inlets of body, and screw column into bottom of body. Put Rosette through bottom of column and tighten fixing screw.

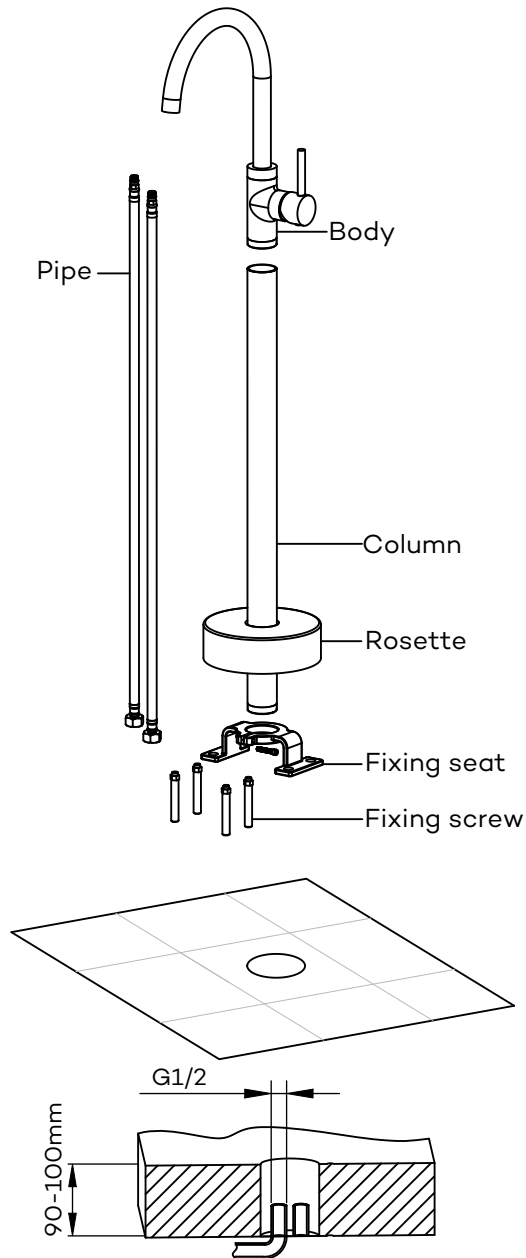

1


2. Mark the hole size of the fixing seat on the ground and drill holes.

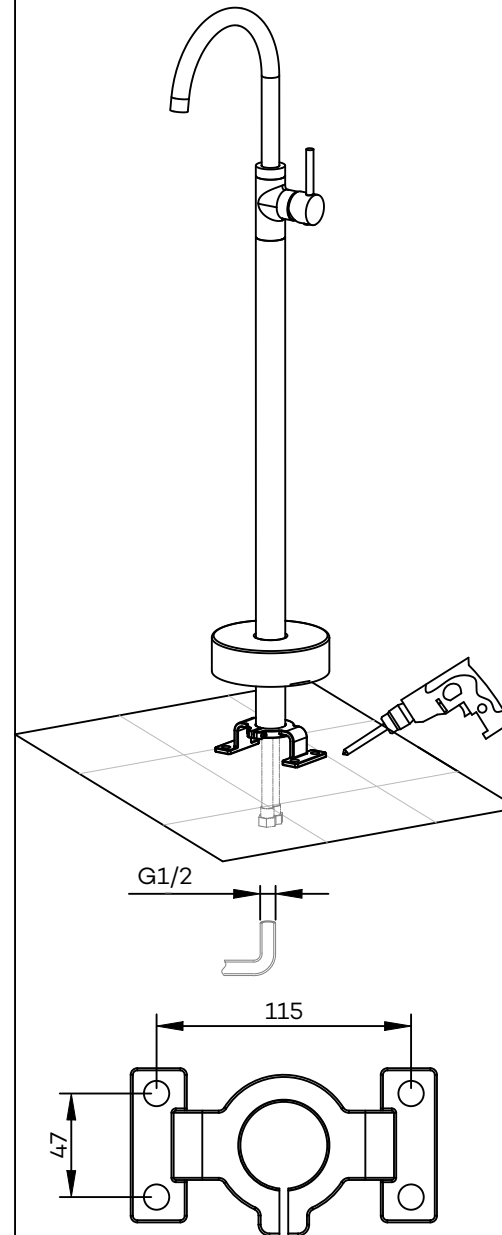

3

3. Tap the expansion screws into the drilled holes. Connect the water inlet pipes to the Water supply pipe threading. Place washers and tighten nuts onto expansion screws. Test and check for leaks.

Finally, fit the Mixer and push the rosette close to the ground to conceal fixing seat.

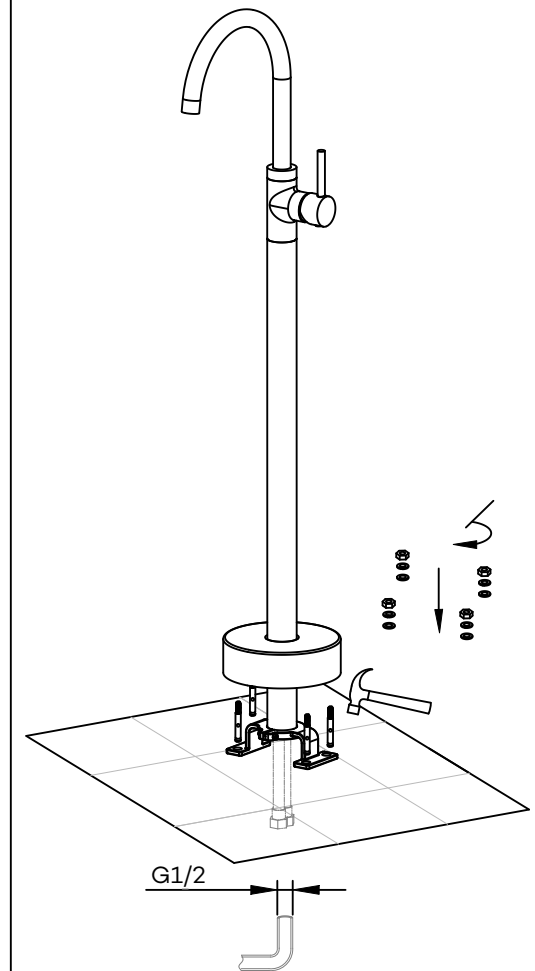

4